


BRABANTIA PORTABLE BLENDER

Instruction Manual
BBEK1055

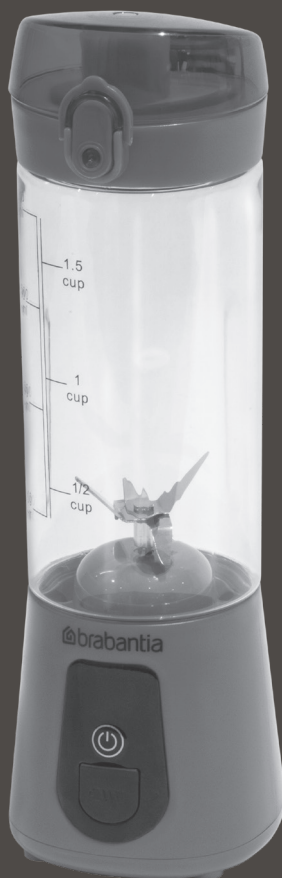

www.brabantia.com/electrical-appliances

 **brabantia**



THANK YOU FOR PURCHASING OUR PORTABLE BLENDER

We hope it will delight you and that it will get a special place in your home. Enjoy!

IMPORTANT SAFEGUARDS

When using this appliance, basic safety precautions should always be followed, including but not limited to the following:

1. Read all instructions prior to using the appliance.
2. Use only a power supply corresponding to the marking on the bottom of the motor base.
3. ALWAYS exercise care when handling the blade assembly as the blades are sharp. Failure to use care when handling the blade assembly may result in a risk of laceration.
4. Take your time and exercise care during unpacking and appliance setup. This appliance contains sharp, loose blades that may cause injury if mishandled.
5. Before use, wash all parts that contact food. Follow the cleaning instructions in this instruction manual.
6. DO NOT blend hot liquids, effervescent, or carbonated liquids, as doing so may cause pressure buildup, resulting in risk of burns or other injuries to the user.
7. DO NOT fill the blending cup past the 400ml mark, exceeding this line can result in leakage or stoppage of the blade.
8. DO NOT overfill the cup body with ice as it may stop the blades from turning resulting in damage to the unit or injury.
9. DO NOT put your hands inside the cup body or anywhere near the blade assembly. Keep hair, and clothing out of the cup body when loading and operating as blades can still activate when the sip lid is removed.
10. ALWAYS ensure the cup body is securely locked on the motor base before blending. This model will not turn on unless the cup body is secure.
11. Remove utensils prior to processing. Failure to remove utensils may cause damage to the blending cup, or personal injury.
12. DO NOT submerge the motor base in any form of liquid to
13. DO NOT store outdoors.
14. Close supervision is necessary when any appliance is used near children. DO NOT allow children to use as a toy.
15. This appliance is NOT intended to be used by people with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
16. DO NOT use if the blade is bent or damage is suspected. Before each use, inspect the blade assembly for damage.
17. DO NOT attempt to sharpen blades.
18. DO NOT allow any part of the unit to contact hot surfaces, including stoves and other heating appliances.
19. ALWAYS use the appliance on a dry and level surface.



20. ONLY use attachments and accessories that are provided with the product. The use of attachments not approved for this appliance may cause fire, electric shock, or injury and may void the warranty.
21. Avoid contact with moving parts during operation and handling of the appliance.
22. DO NOT operate the appliance with an empty cup body.
23. DO NOT microwave any containers or accessories provided with the appliance.
24. Blend soft fruit/vegetables and liquids only. DO NOT use the appliances for grinding meat, beans, nuts or very hard ingredients, this will cause product failure and affect product life.
25. DO NOT expose the containers and accessories to extreme temperature changes as this may cause damage.
26. NEVER leave the appliance unattended while in use.
27. If you find unmixed ingredients sticking to the sides of the cup body, turn the appliance off using the power button, and use a scraper to dislodge ingredients.
28. DO NOT attempt to remove the cup body and/or sip lid from the motor base while the blade is still spinning. Allow the appliance to come to a complete stop before removing lid and/or cup body.
29. DO NOT store ingredients for extended amounts of time before or after blending them. Some foods may contain active ingredients or release gases that will expand if left in a sealed container. This may result in excessive pressure buildup that can pose a risk of injury.
30. Should the appliance overheat, a thermal switch will activate and temporarily disable the motor. To reset, turn OFF the appliance using the power button and allow it to cool for approximately 15 minutes before using again.
31. DO NOT idle the appliance, stop the machine after idling for 5 seconds and restart.
32. The appliance will operate for a maximum of 20 seconds before the motor automatically stops.
33. DO NOT process dry ingredients without adding liquid to the cup body. This appliance is not intended for dry blending.
34. Only operate with the sip lid on.
35. DO NOT refrigerate or freeze the appliance.
36. Switch off the appliance before changing accessories.
37. DO NOT misuse the appliance as it may cause injury.

BATTERY USE


The battery is the power source for the Brabantia Portable Blender. Carefully read and follow the instructions.

- DO NOT incinerate this appliance even if it is severely damaged. ~~The lithium-ion batteries~~ Always properly recycle products powered by lithium-ion batteries.
- Prevent accidental blade activation by ensuring the blender is turned OFF when not in use, while cleaning, or when drinking from the sip lid.
- Keep the battery away from all metal objects such as paper clips, coins, keys, nails, or

screws. Shorting the battery terminals together increases the risk of fire or burns.

- A DC motor and battery are inside the appliance.
- A USB-C charger is included with this appliance.
- The appliance includes a minimum charge after production. Please fully charge it before your first use, using the USB-C provided. The charging port is located at the front of the motor base under the ON/OFF button.
- The minimum charging time is 4 hours, the maximum is 5 hours. DO NOT overcharge or leave the appliance to charge overnight. This will shorten the life of the appliance and battery.
- This appliance contains lithium-ion batteries that are not replaceable

KNOW YOUR PORTABLE BLENDER

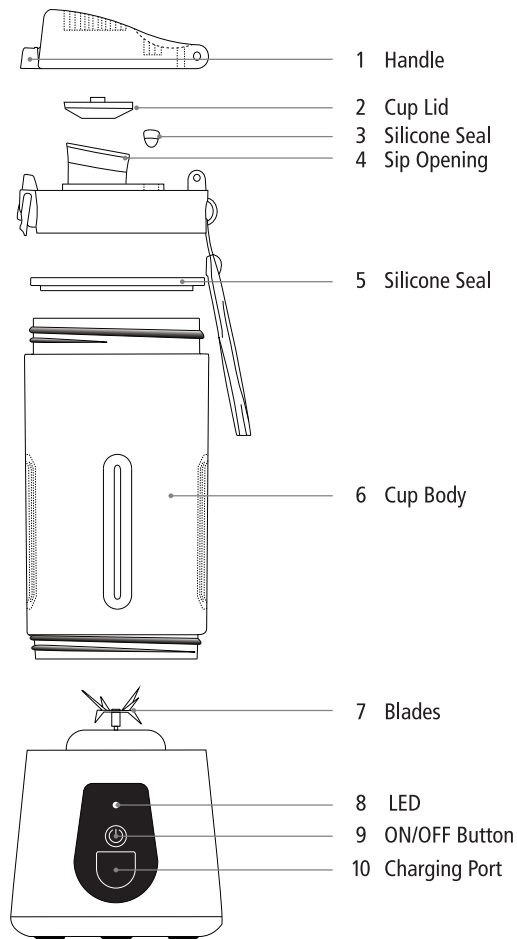

USING YOUR PORTABLE BLENDER

Remove all packaging materials from the appliance.

Before use: hand wash the cup body and lid with hot, soapy water. You can also clean the cup body by adding cold water and a drop of dishwashing soap to the cup body and blending for one cycle.

Rinse clean and dry.

Gently rinse the blade assembly and wipe with a damp sponge or cloth. NEVER submerge or run the motor base under water.

DO NOT put any parts of this appliance in the dishwasher.

Always store this appliance in a safe place, upright with the cup body attached, so that the blades are covered and not exposed.

IMPORTANT: ENSURE YOU READ THE INSTRUCTION MANUAL BEFORE PROCEEDING.

1. Ensure the motor base is fully charged and the cup is properly installed by aligning the cup body with the motor base.
2. Add ingredients, starting with solid ingredients cut into small pieces (approx. 1.5cm x 1.5cm) then liquid ingredients to the 400ml line. If using ice, always add after the solid and liquid ingredients. DO NOT fill ingredients (including ice) past the 400ml line.
3. Secure lid onto the cup, twisting clockwise to tighten. Make sure the lid latch is upright and in the locked position.
4. Press the ON/OFF button to blend for a 20-second blend cycle. If you need to pulse the ingredients or stop you blend cycle early, simply press the ON/OFF button again to stop.
5. The digital LED will indicate the number of seconds of blending.
6. Unlock the lid latch by pulling down the latch and push up the lid to open and reveal the spout.

CARE AND MAINTENANCE

STEP 1: Always make sure the appliance is turned OFF and the charger is NOT connected to the charging port after each use.

STEP 2: Hand-wash the Cup and Lid with warm, soapy water and rinse clean.
NOTE: None of the parts of this appliance are dishwasher safe.

STEP 3: Gently rinse the blade assembly and wipe with a damp sponge or cloth. NOTE: The motor base must not be submerged in water.

You can also clean the cup body by adding cold water and a drop of dishwashing soap to the cup body and blending for one cycle.

WARNING: Do not touch blades! They are very sharp.

WARNING: Do not blend hot or warm liquids.

WARNING: Never submerge the Motor Base into water or any other liquid.

TROUBLESHOOTING

PROBLEM	REASON	HOW TO SOLVE
Portable Blender not working	The cup body is not screwed onto the motor base securely	Tighten the cup body onto the motor base
Portable Blender stops working and LED display shows LO	Battery power is low	Charge the portable blender
Portable Blender stops working and LED display shows 5 seconds	Blender has been run idle for 5 seconds or more, the appliance automatically stops	Press the ON/OFF button to restart
Portable Blender stops working and LED display flashes ER slowly	Blades and motor are locked due to hard object	Remove the hard object and restart
LED display flashes ER fast when securing the cup body	The motor is locked due to cup body not tightly secured	Resecure the cup body onto the motor base tightly
Portable Blender is leaking	The silicone ring is not inserted correctly	Insert the silicone ring correctly
LED display flashes CH	The appliance is charging	This is normal operation when charging
LED display shows FU	The appliance is fully charged	This is normal operation when fully charged

WARRANTY

In the unlikely event that you have a problem with your Brabantia appliance, please be aware that your Brabantia appliance has a 2-year warranty.

For all enquiries including replacement parts, please contact the retailer you purchased this product from or the New Zealand Brabantia Agent toll free number 0800 127 727.

Warranty Exclusions

The warranty will not be valid if:

1. The product has not been installed, operated or maintained in accordance with the manufacturer's operating instructions provided with the product.
2. The product has been used for any purpose other than its intended function.
3. The damage or malfunction of the product is caused by any of the following:
 - Incorrect voltage
 - Accidents (including liquid or moisture damage)
 - Misuse or abuse of the product
 - Faulty or improper installation
 - Mains supply problems, including power spikes or lightning damage
 - Infestation by insects
 - Tampering or modification of the product by persons other than authorised service personnel
 - Exposure to abnormally corrosive materials
 - Insertion of foreign objects into the unit
 - Usage with accessories not pre-approved by Brabantia

Warning: To reduce the risk of fire or electric shock, never use the appliance together with an external electronic timer. Have any repairs carried out solely by a qualified electrician. Never try to repair the appliance yourself.

PLEASE REFER TO AND HEED ALL WARNINGS AND PRECAUTIONS IN THIS INSTRUCTION MANUAL.

DUE TO CONTINUOUS PRODUCT DEVELOPMENT, SPECIFICATIONS MAY BE SUBJECT TO CHANGE WITHOUT PRIOR NOTIFICATION.

SPECIFICATIONS

Rated Voltage:	7.4V
Rated Power:	15A
Battery:	3000mAH
Maximum Capacity:	450mls
Operating Time:	20 seconds
Rotating Speed:	18000 RPM +-15% no-load 15000 RPM +-15% load

ENVIRONMENT FRIENDLY DISPOSAL



Correct Disposal of this product (Waste Electrical & Electronic Equipment) (Applicable in the European Union and other European countries with separate collection systems) The European Directive 2012/19/UE on Waste Facilities Electrical and Electronic (WEEE) This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product or their local authority office, for details of where and how they can take this item for environmentally safe recycling.

DO NOT incinerate this appliance even if it is severely damaged. The lithium-ion batteries can explode in a fire. Always properly recycle products powered by lithium-ion batteries.



Manufactured by SRB Pacific Limited under
exclusive licence of Brabantia Nederland B.V.

SRB Pacific Limited,
PO Box 331260, Takapuna,
Auckland 0740, New Zealand

PRODUCT INFORMATION

BBEK1055 PORTABLE BLENDER



BRISCOES NEW ZEALAND LTD.