


HARDWARE LIST

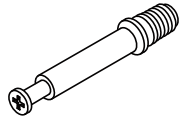


6 x A
Quickfit Screw




6 x B
Cam Lock




12 x C
Wooden Dowel

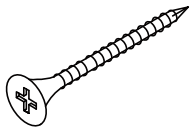


14 x D
Screw




2 x E
Screw

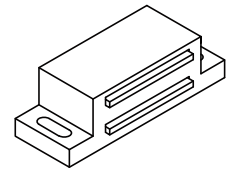


1 x F
Magnet




10 x G
Screw

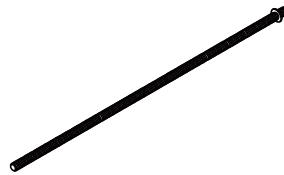


1 x H
Rebar Bolt

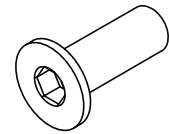

1 x I
Bolt

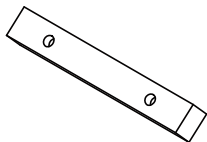


1 x J
Handle




1 x K
Bracket



2 x L
Screw



6 x M
Screw

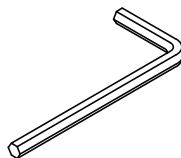


1 x O
Allen Key




1 x P
Washer


PARTS LIST

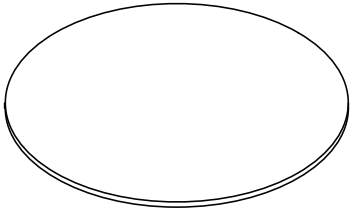


1
1 PC

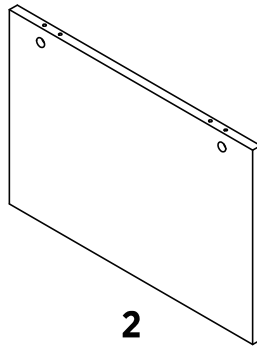

2
1 PC

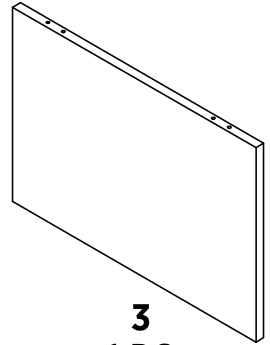


3
1 PC




4
1 PC




5
1 PC

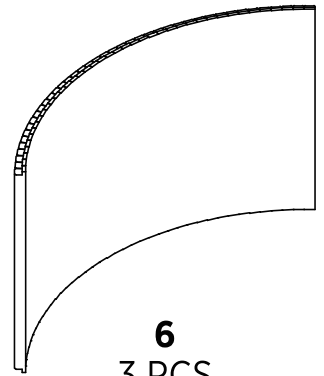


6
3 PCS

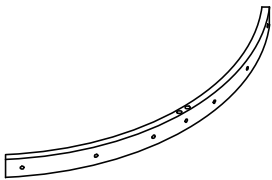


7
1 PC

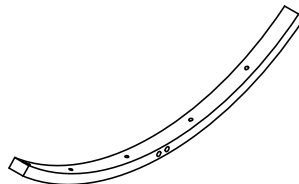

8
1 PC




9
1 PC




10
1 PC



11
1 PC



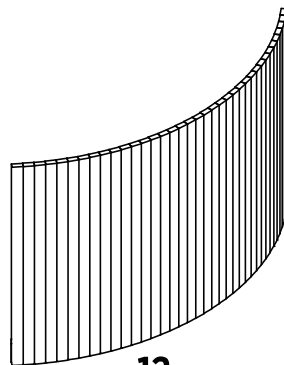


12
1 PC


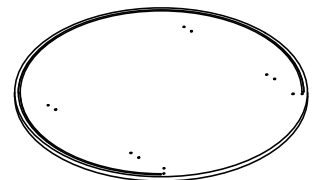


13
1 PC



STEP 1

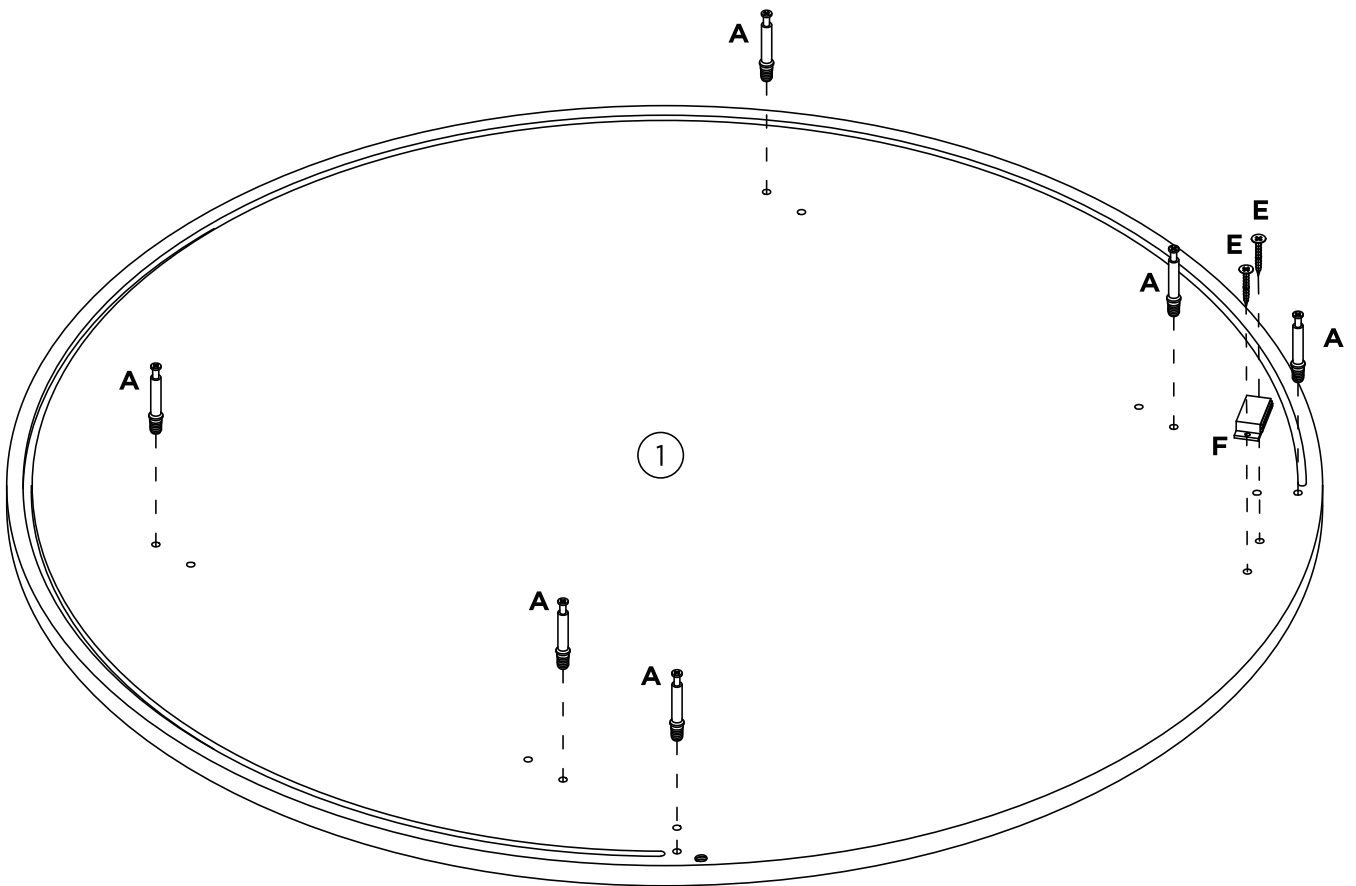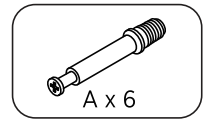


STEP 2

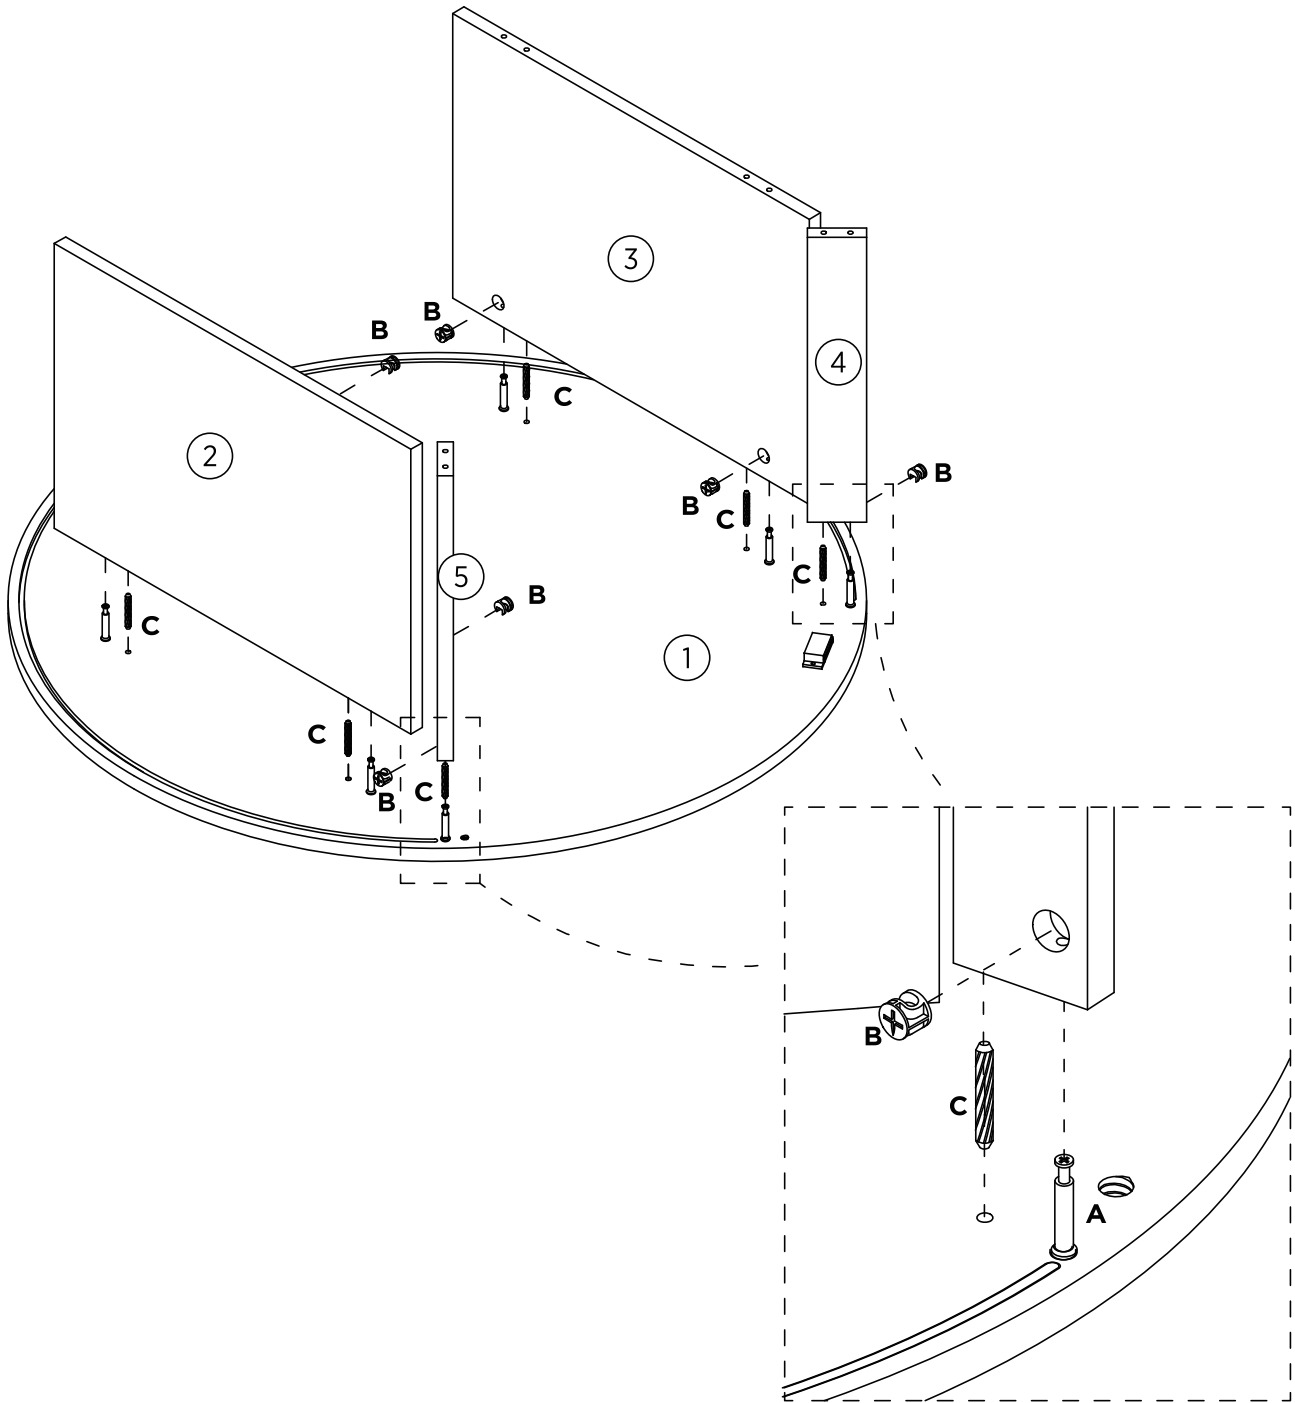



STEP 3

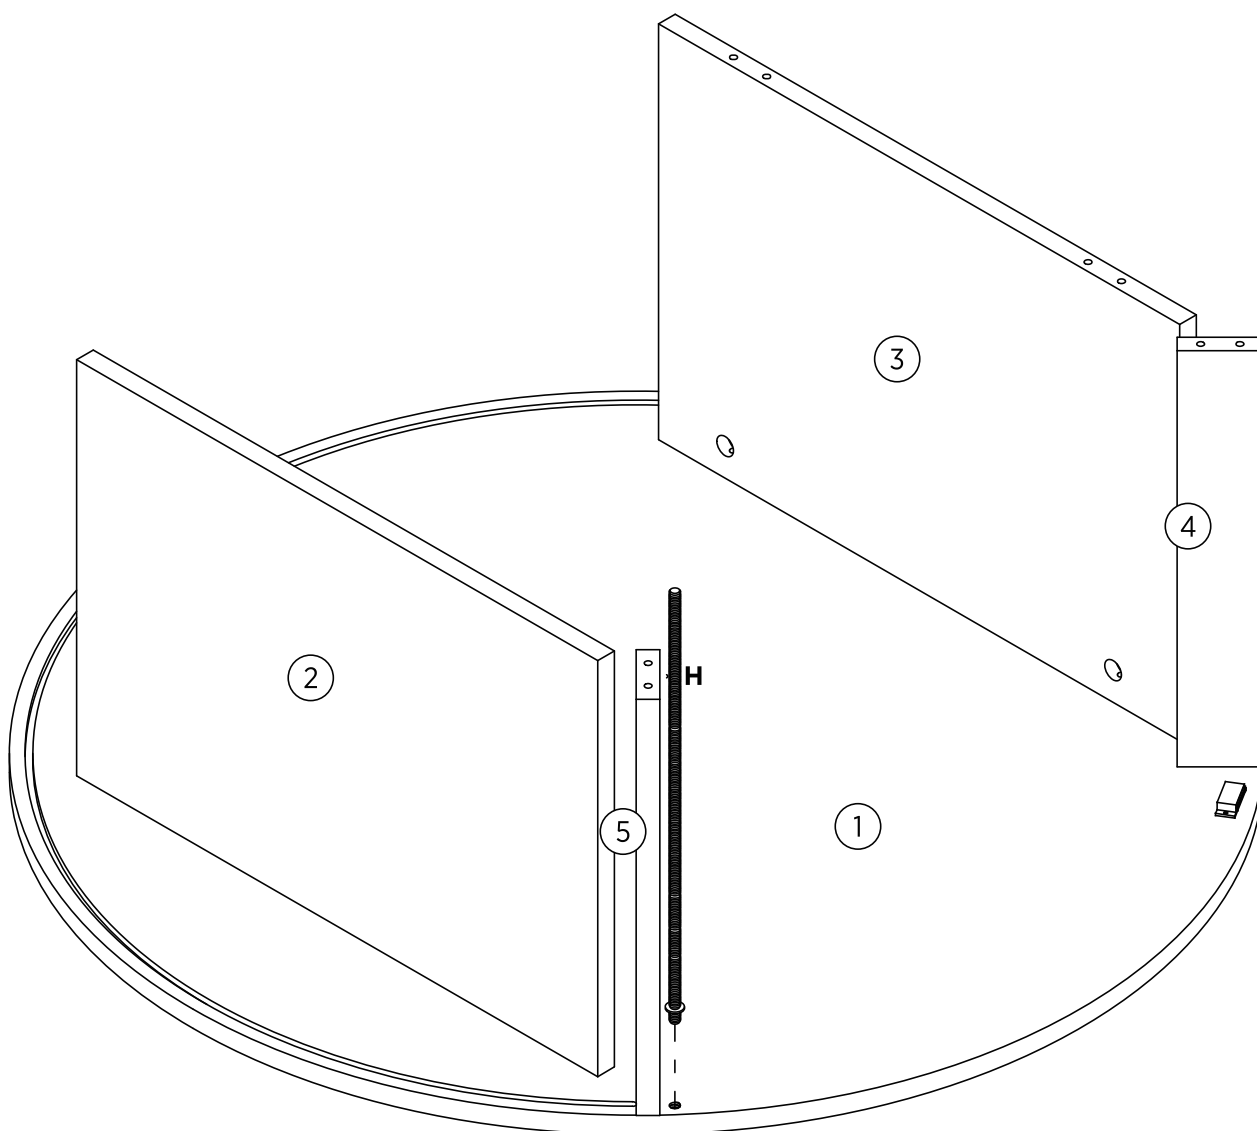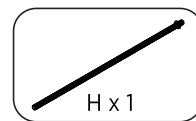




STEP 4

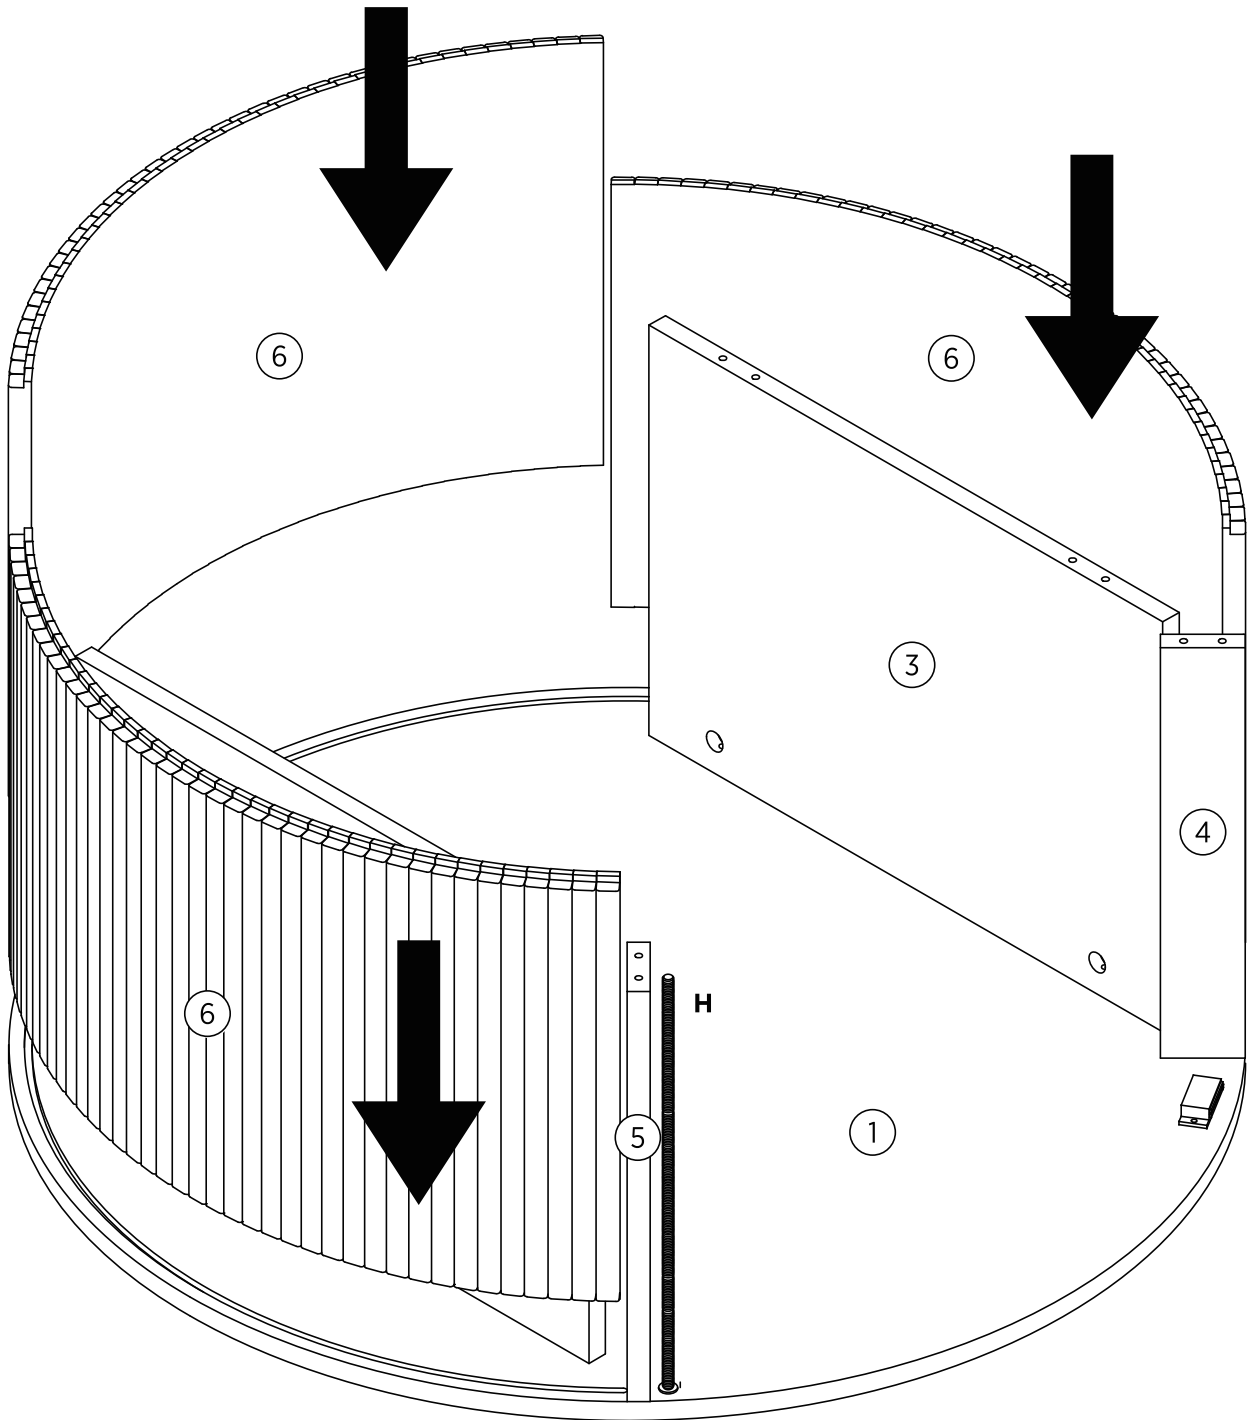



STEP 5

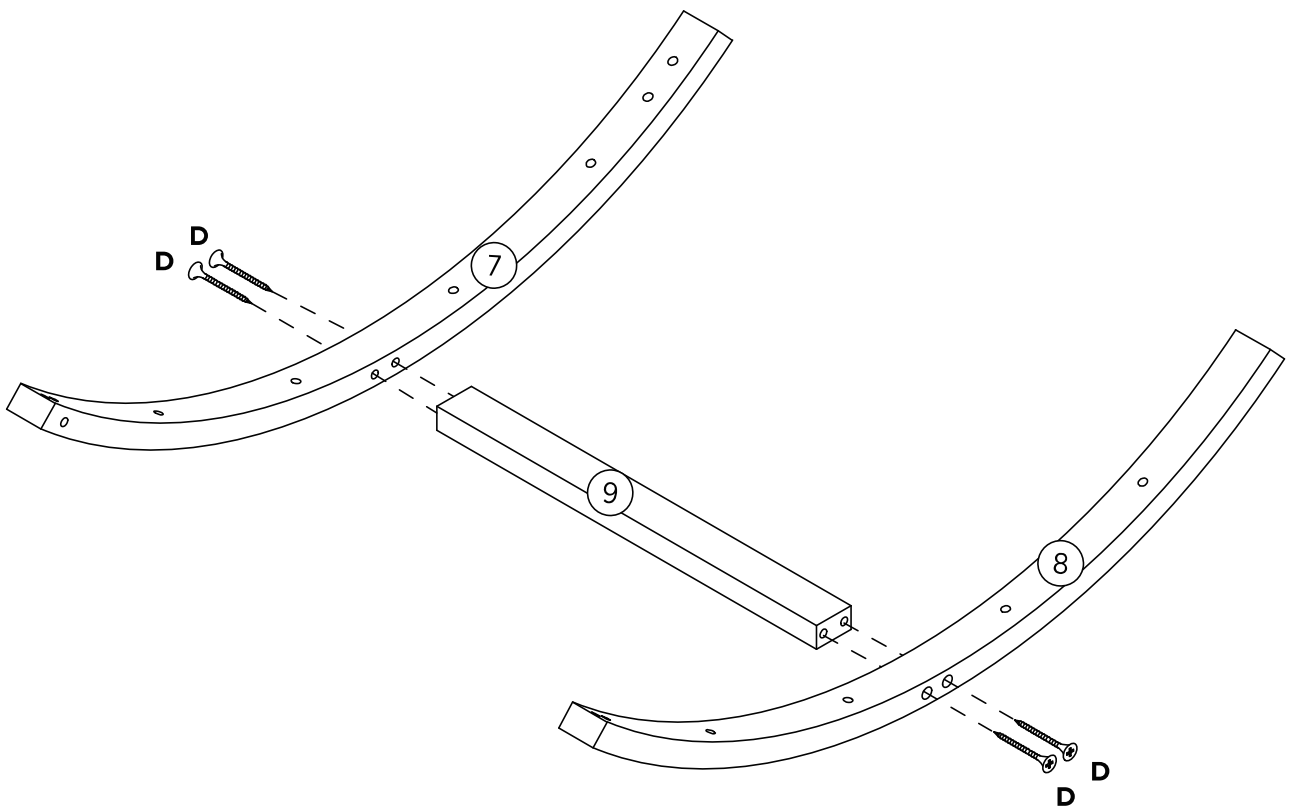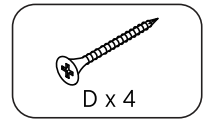




STEP 6

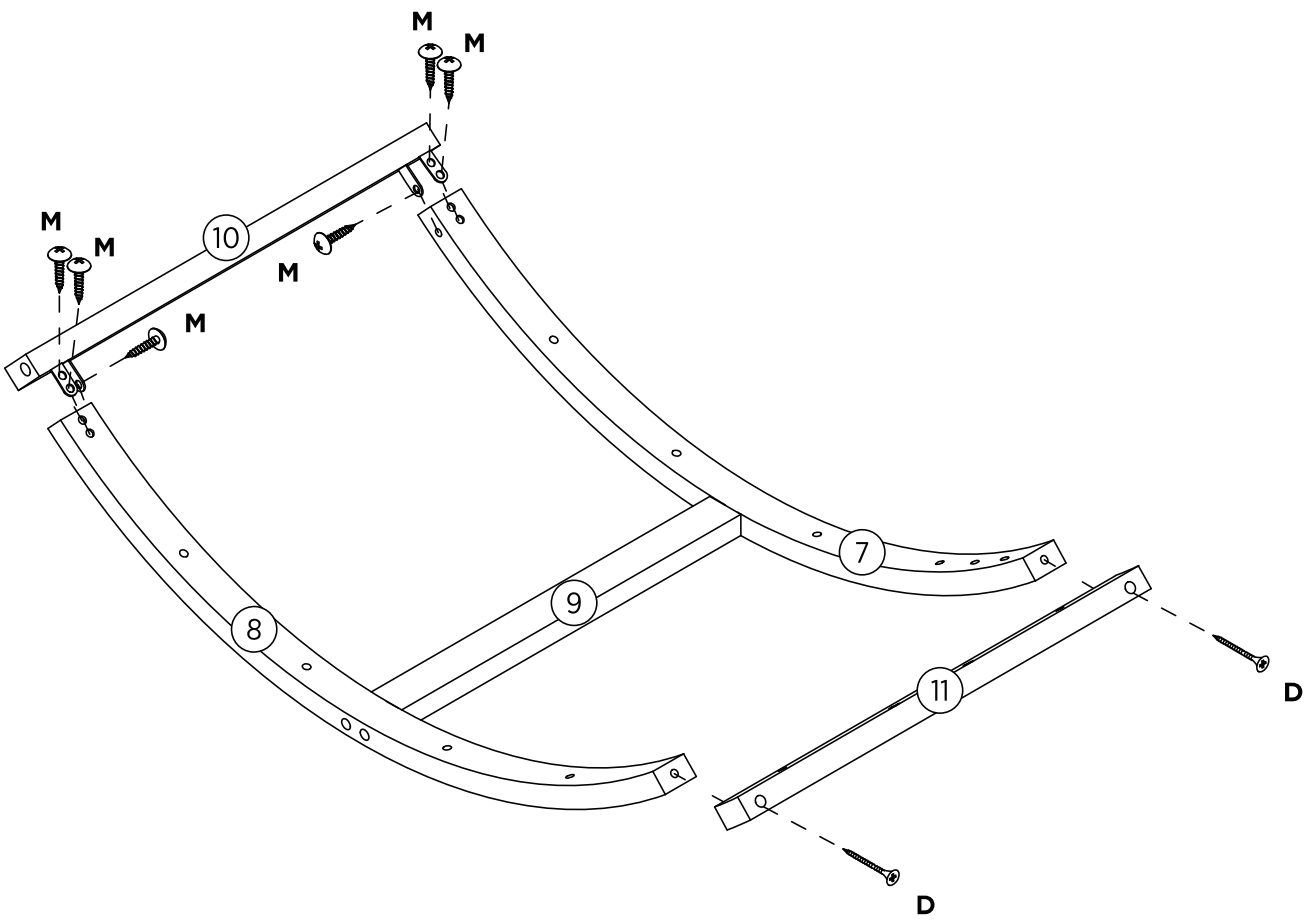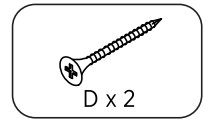




STEP 7

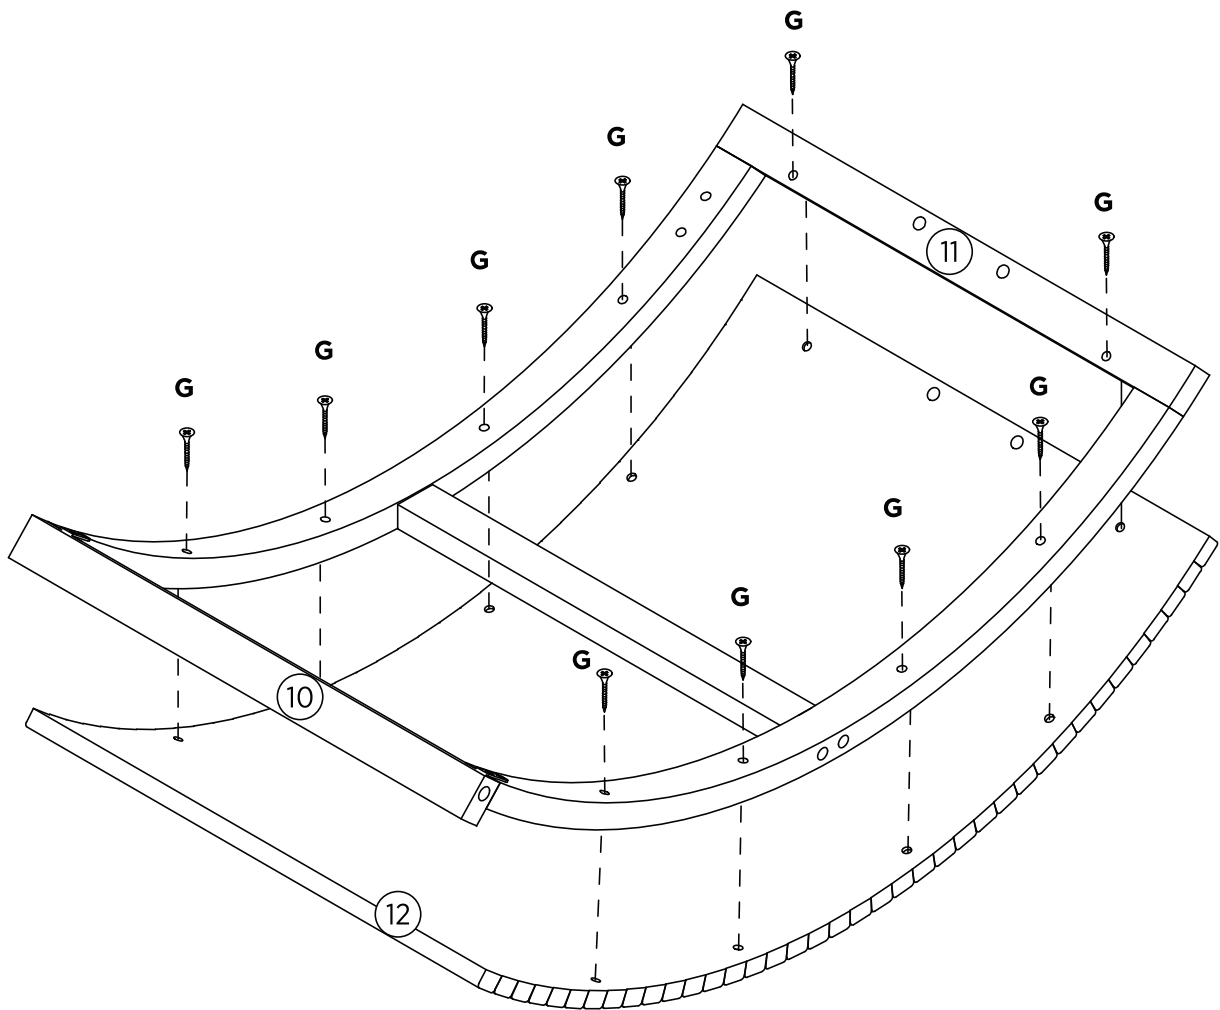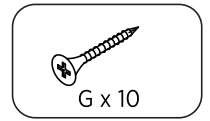


STEP 8

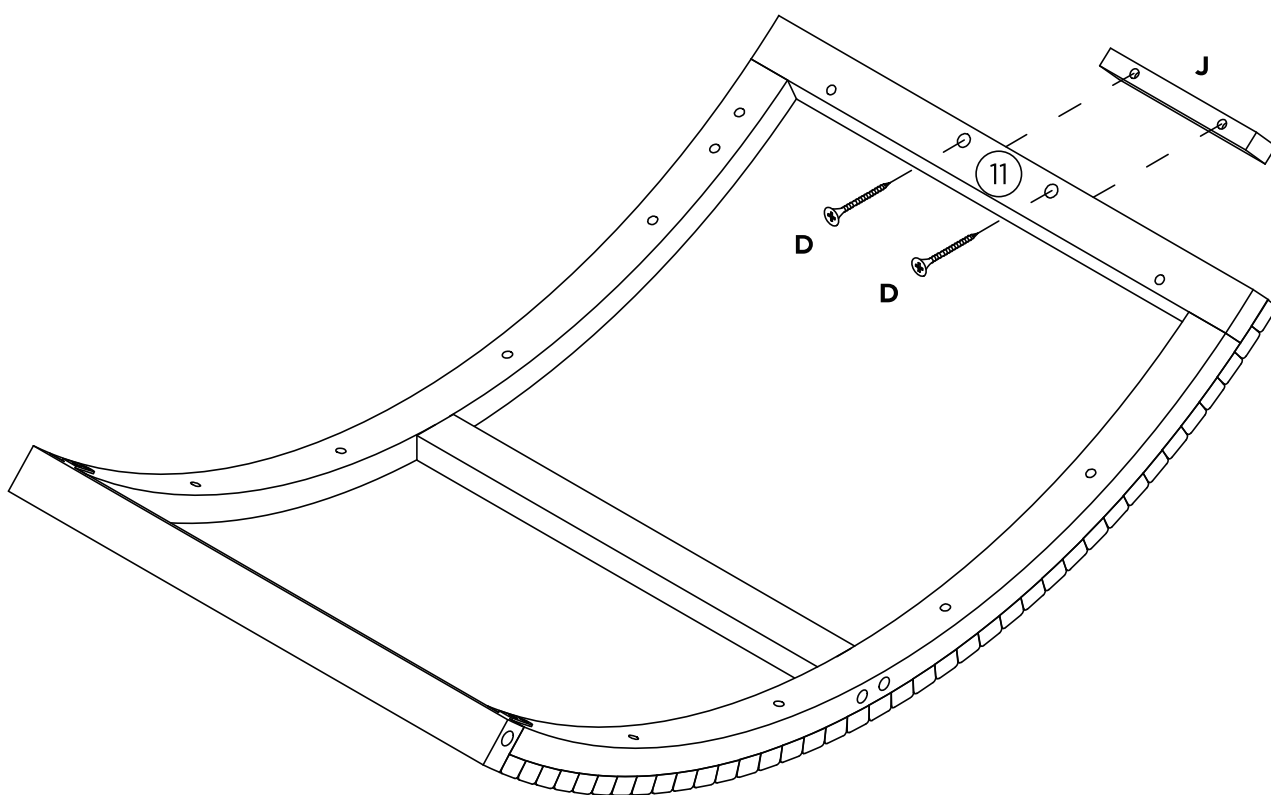







STEP 9

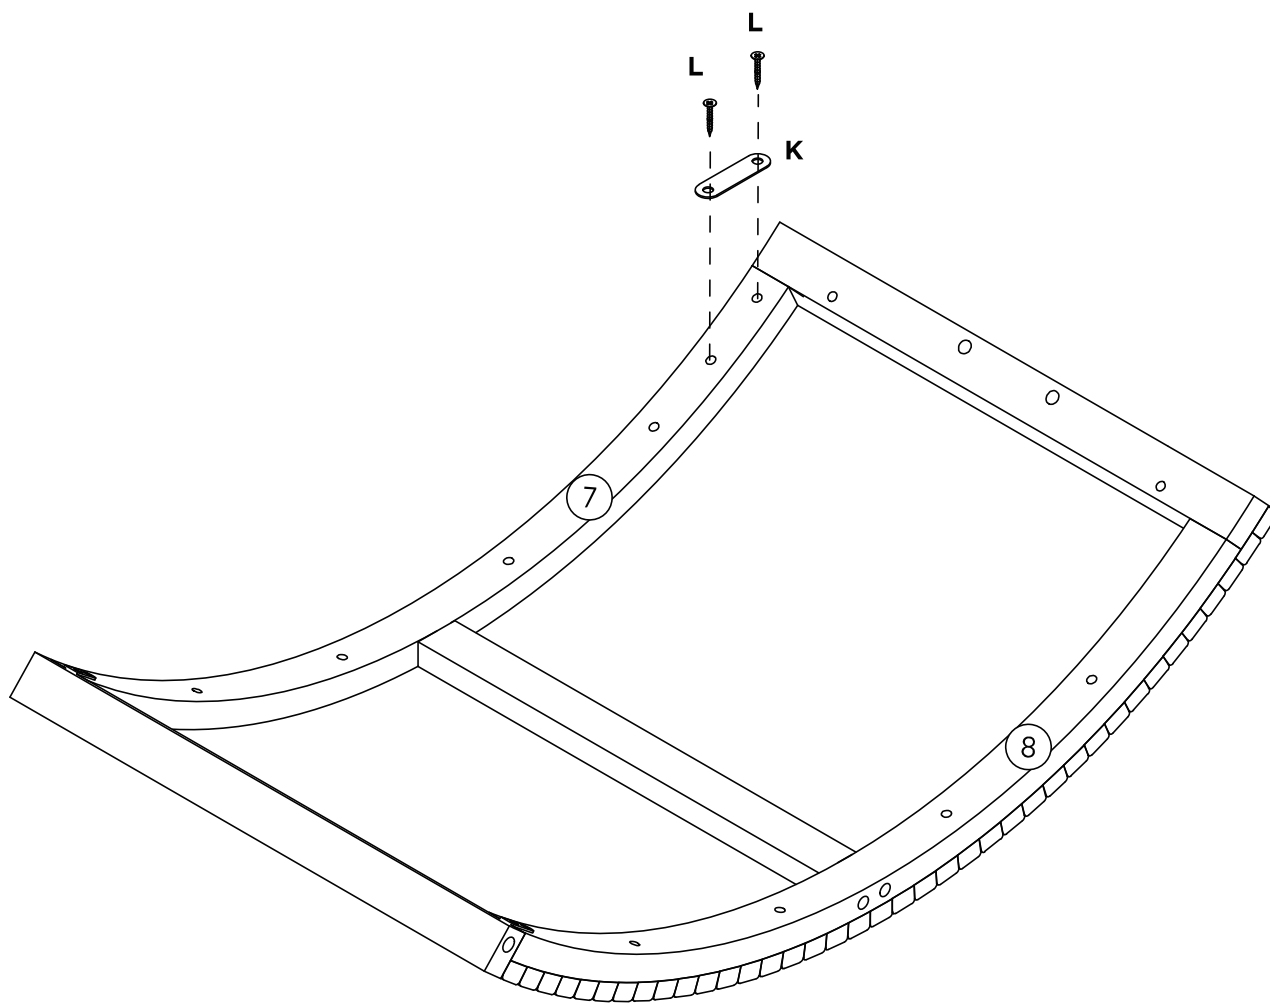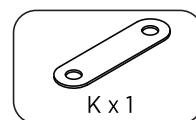

STEP 10

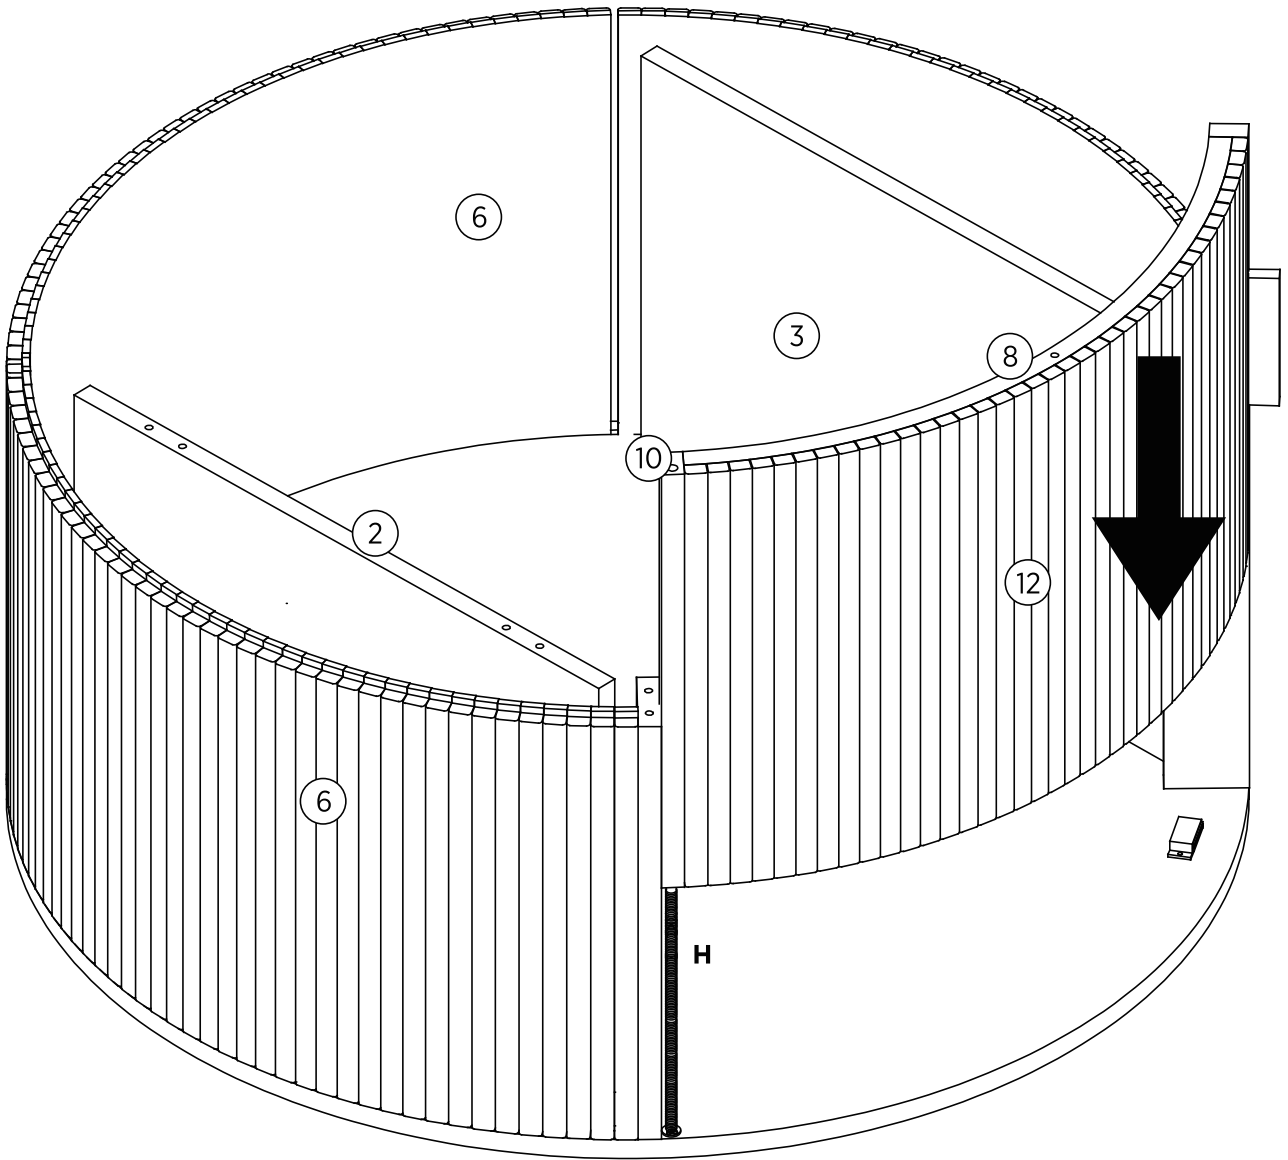

STEP 11

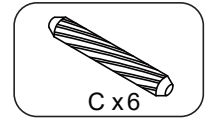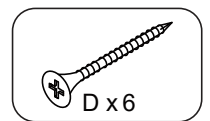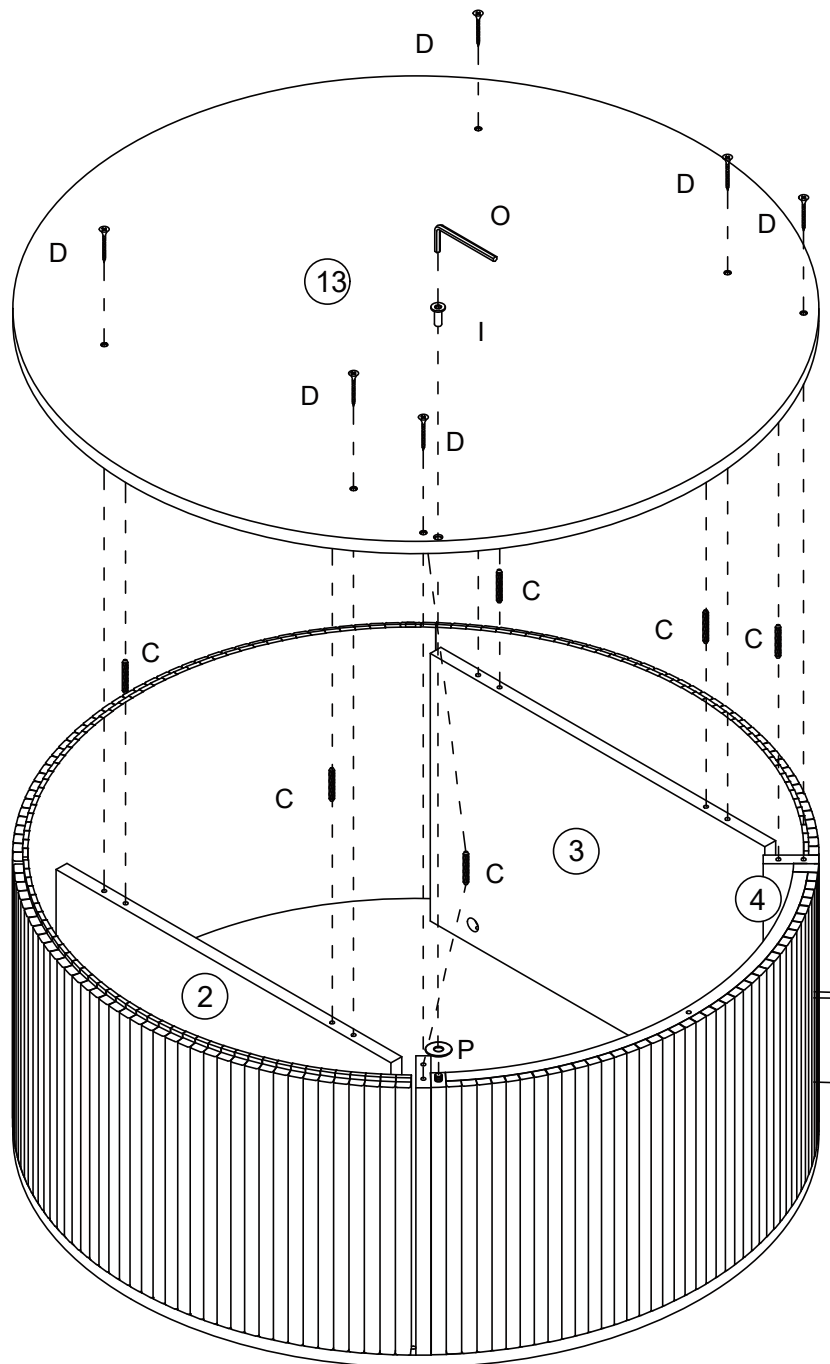

STEP 12

